 



How to Update Software on Wise 2086 Tension Head (Series 14)

1. Turn on Wise 2086


2. Open “NewUpdater” from the folder provided.

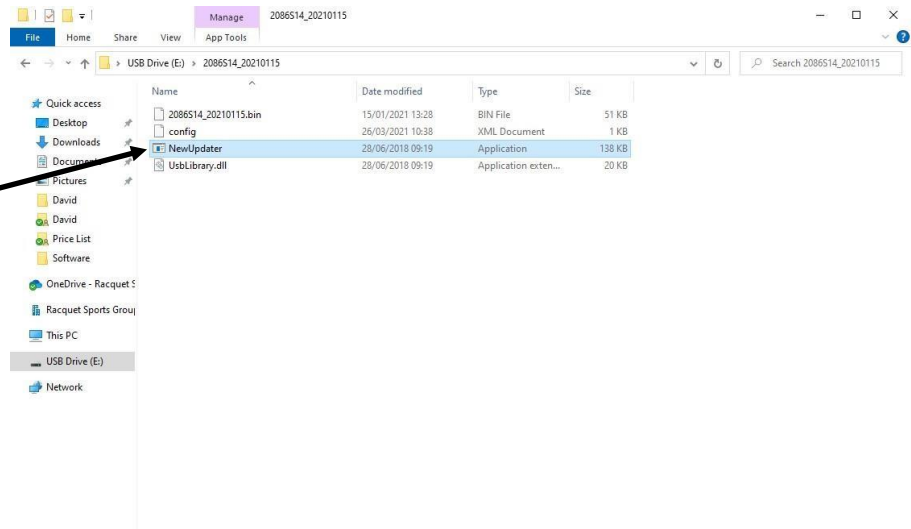

 3. Plug USB cable into Wise 2086 and PC. The “NewUpdater” should now show “Device Connected” in the bottom left

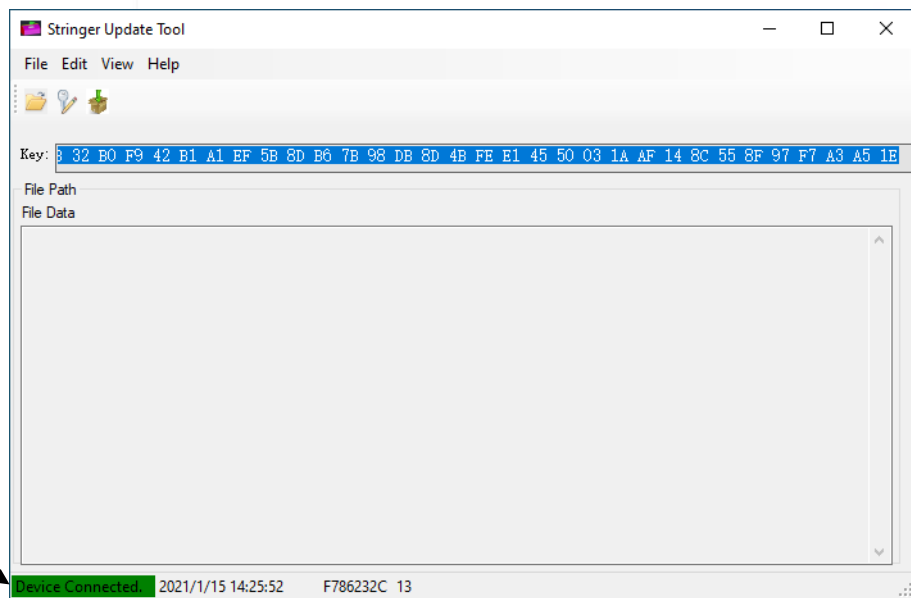

4. Select the yellow folder icon to “Open a update file or a project file.”

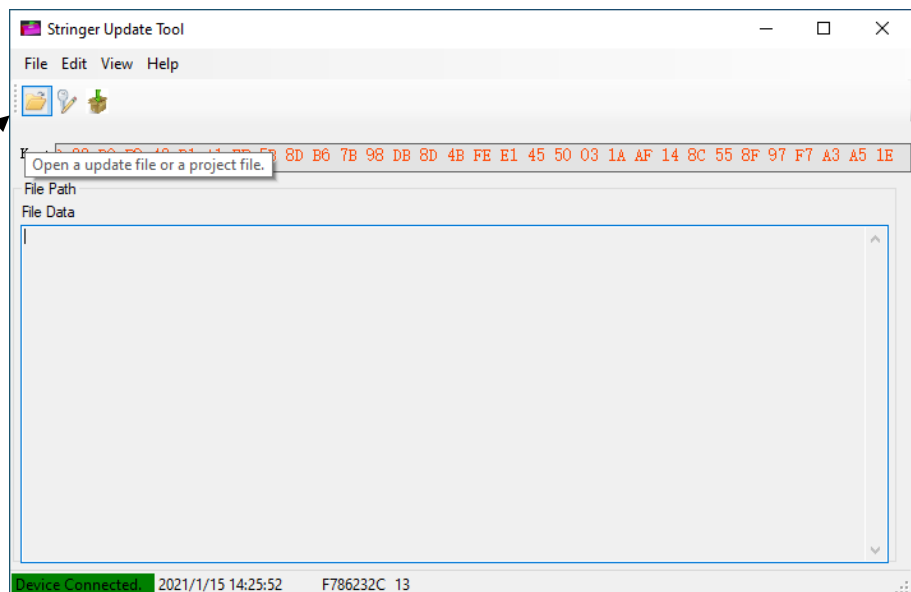

How to Update Software on Wise 2086 Tension Head (Series 14)

5. Select the file from the folder named 2086S14_*****.bin

6. Close and reopen the program.

Ensure the file name is still

2086S14_*****.bin— IMPORTANT!

7. Click the brown box, named “Download the data to machine when ready”

8. The software will now update

9. Once complete, the Wise 2086 will restart. Once this is complete the Wise 2086 can be disconnected.

